


## User Manual of Microwave Motion Sensor Detached version, Model No.: HC009S-KD

### Technical Specifications

<b>PRODUCT TYPE:</b>	<b>Microwave Motion Sensor</b>
<b>OPERATING VOLTAGE:</b>	<b>220-240VAC 50Hz/60Hz</b>
<b>HF SYSTEM:</b>	<b>5.8GHz CW radar</b>
<b>TRANSMISSION POWER:</b>	<b>&lt;0.2mW</b>
<b>RATED LOAD:</b>	<b>800W(capacitive load)</b>
<b>DETECTION ANGLE:</b>	<b>30~150°</b>
<b>POWER CONSUMPTION:</b>	<b>&lt; 1W</b>
<b>DETECTION RANGE:</b>	<b>Max. 12 meters in diameter, adjustable</b>
<b>TIME SETTING:</b>	<b>10s ~ 30 min.</b>
<b>MOUNTING:</b>	<b>Indoors, ceiling &amp; walling mounted</b>
<b>LIGHT CONTROL:</b>	<b>5 ~ 50LUX, disable</b>
<b>WORKING TEMP.:</b>	<b>-20 ~ +60°C</b>

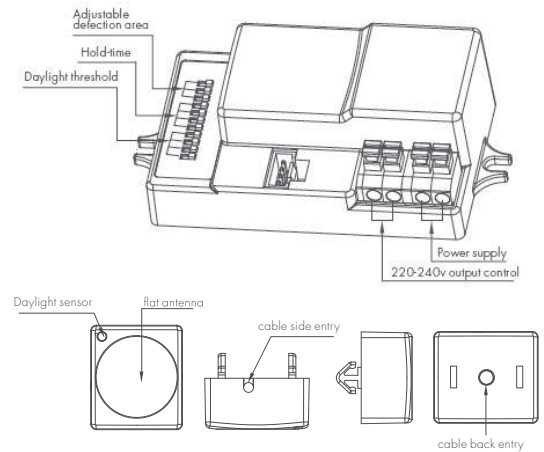

The sensor is an active motion detector; it emits a high-frequency electro-magnetic wave 5.8GHz and receives its echo. The sensor detects the change in echo from movement in its detection zone. A microprocessor then triggers the switch light ON command. Detection is possible through doors, panels of glasses thin walls.


NOTE: the high-frequency output of this sensor is <0.2mW; approximately just 0.1‰ of the transmission power of a mobile telephone or the output of a microwave oven.

### **IMPORTANT**

**PLEASE READ THESE INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION AND RETAIN THIS LEAFLET IN A KNOWN AND SAFE PLACE FOR FUTURE REFERENCE.**

### **SECTION 1 INSTALLATION & WIRING**


**2.1. ENSURE THAT THE ELECTRICITY SUPPLY IS SWITCHED OFF COMPLETELY BEFORE INSTALLING OR SERVICING THIS PRODUCT .**

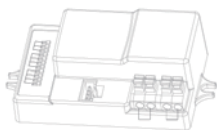

The sensor works with a main voltage of 220-240VAC 50Hz. A 100-120VAC version is available on request. The sensor has a 4-wire electrical interface:

- Nx2 (neutral / 220-240VAC)
- L (phase / 220-240VAC)
- L' (switched phase / output)

#### **Wiring diagram**

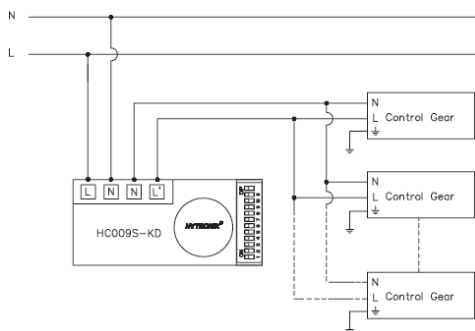

2.2 This sensor is suitable for indoor use, and is also designed for installation Max. 6m in height.


### SECTION 2 SETTINGS

#### Detection range:

This determines the effective range of the motion detector and is set by DIP switches at the sensor itself, refer to figure. Note that reducing the sensitivity will also narrow the detection range. The following settings are available:

- I - Detection range 100%
- II - Detection range 75%
- III - Detection range 50%
- IV - Detection range 25%
- V - Detection range 10%

	1	2	3	
I	●	●	●	100%
II	●	○	●	75%
III	○	○	●	50%
IV	○	●	○	25%
V	●	○	○	10%




#### Hold time:

This determines the time the fitting remains at 100% level on motion detection and is set with DIP switches at the sensor itself, refer to figure. The walk test setting is useful when installing the fitting to establish correct operation and range. The following settings are available:

- I - 30min
- II - 20min
- III - 6min
- IV - 90s
- V - 30s
- VI - 10s

	1	2	3	4	
I	●	●	●	●	30min
II	○	○	○	●	20min
III	○	○	●	○	6min
IV	○	●	○	○	90s
V	●	○	○	○	30s
VI	○	○	○	○	10s




#### Daylight sensor:

This setting holds off the 100% light output should there sufficient daylight and is set using DIP switches at the sensor, refer to figure. The following settings are available:

- I - disable
- II - 50 lux
- III - 30 lux
- IV - 10 lux
- V - 5 lux

	1	2	3	4	
I	●	●	●	●	Disable
II	○	○	●	○	50Lux
III	○	●	○	○	30Lux
IV	●	○	○	○	10Lux
V	○	○	○	○	5Lux

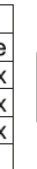


\*In disable mode the lamp(s) will always be on with motion detected and operate at 100% light output, even in bright daylight.

### SECTION 3 SENSOR ANTENNA OPTIONS

**Model SAM2**

Daylight sensor

Flat sensor antenna, with optional cable entry (side entry and back entry)

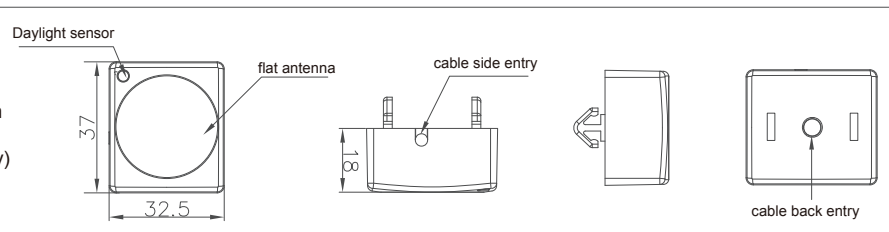

flat antenna

cable side entry


cable back entry

**Model SAM3**

Flat sensor antenna, with plastic fingers to hook on T5/T8 tubes

option 1

option 2

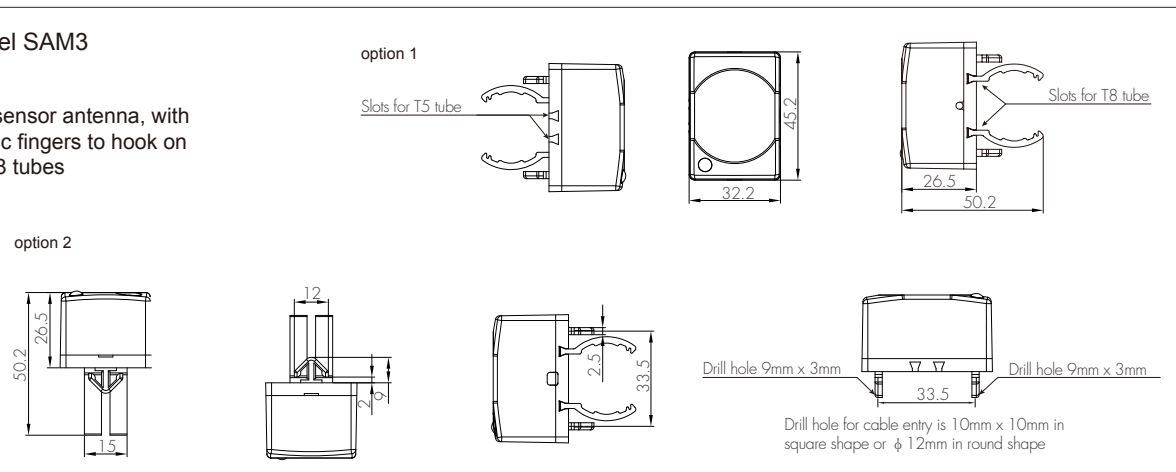

Slots for T5 tube

Slots for T8 tube


Drill hole 9mm x 3mm

Drill hole 9mm x 3mm

Drill hole for cable entry is 10mm x 10mm in square shape or  $\phi$  12mm in round shape

## Model SAM4

Flat sensor antenna, with optional cable entry (side entry and back entry)

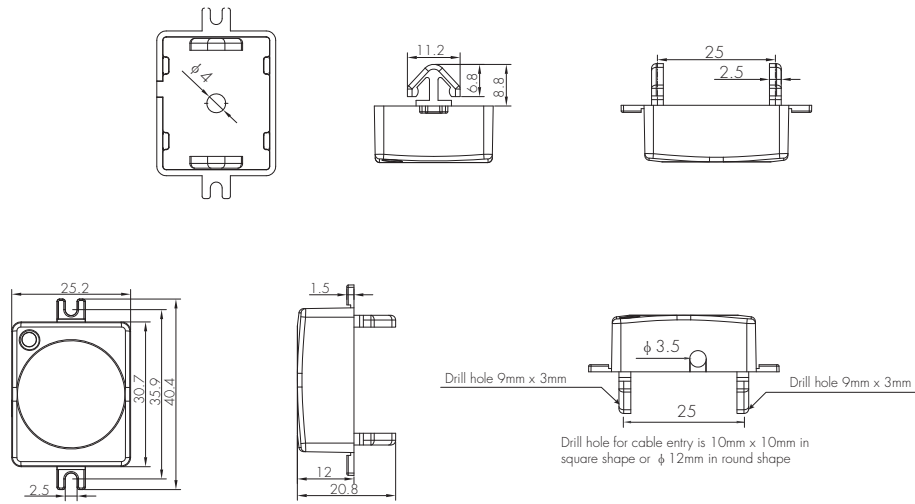

## SECTION 4 FUNCTIONS

### 4.1 Zero-cross relay operation

Designed in the software, the sensor switches on/off the load right on the zero-cross point, to ensure the min. current passing through the relay contact point, and enable the max. load and life-time of the relay.

### 4.2 Loop-in and loop-out

Double L N terminal makes it easy for wire loop-in and loop-out, saves the cost of terminal block and assembly time.

## SECTION 5 TROUBLE SHOOTING

MALFUNCTION CAUSE REMEDY	CAUSE	REMEDY
The load will not work	Incorrect light-control setting selected	Adjust setting
	Load faulty	Replace load
	Mains switch OFF	Switch ON
The load is always on	Continuous movement in the detection zone	Check zone setting
The load is on without any identifiable movement	The sensor is not mounted for reliably detecting movement	Securely mount enclosure
	Movement occurred, but not identified by the sensor (movement behind wall, movement of small object in immediate lamp vicinity etc.)	Check zone setting
The load will not work despite movement	Rapid movements are being suppressed to minimize malfunctioning or the detection radius is too small	Check zone setting